



CoastKey
(Deutch 8 pin)

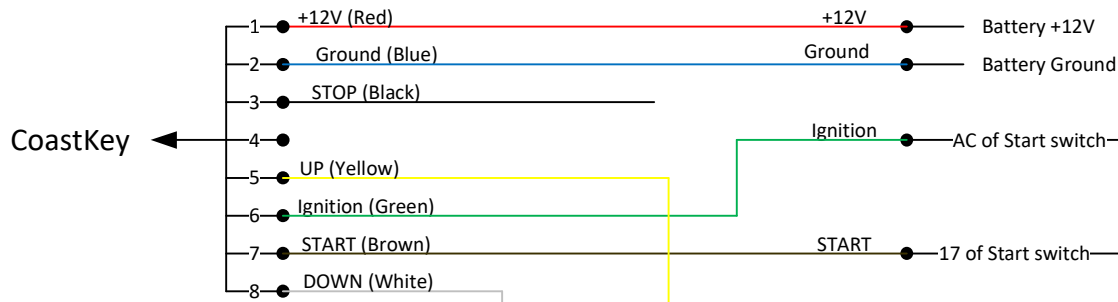

+12 V active:
Connected to
Wind lass -
Down.

+12 V active:
Connected to
Wind lass - Up.


NOTE: If the wind lass is activated by a ground signal, a relay is need to run the wind lass! Use White and Yellow cable to active the relay.

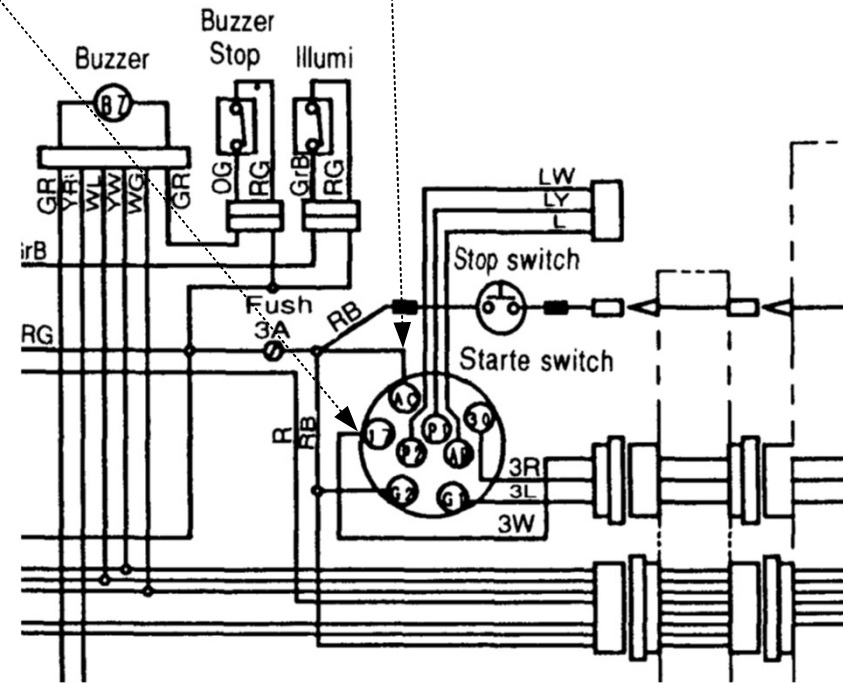

Date	Drawn by	Scale
2019-04-01	Pål Sørensen	-
Item name		
CoastKey connection to Yanmar 4LHA-STE Engine		
Item number		Rev.
NWS003-06		B

CoastKey
(Deutch 8 pin)


Yanmar
VCS1 (Deutch 12 pin)

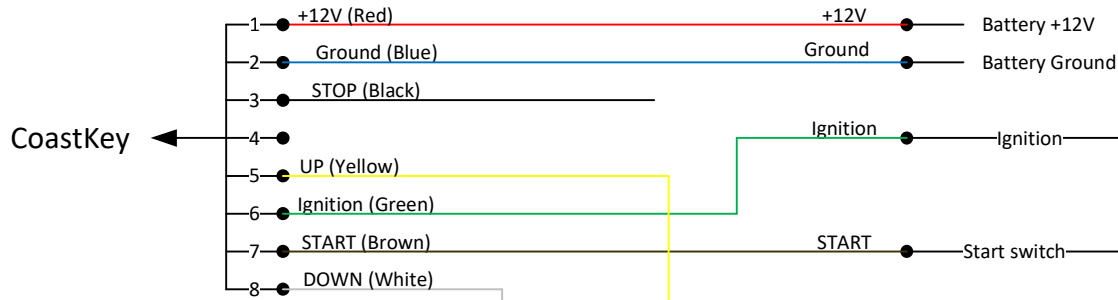

+12 V active:
Connected to
Wind lass –
Down.

+12 V active:
Connected to
Wind lass – Up.

NOTE: If the wind lass is activated by a ground signal, a relay is need to run the wind lass! Use White and Yellow cable to active the relay.

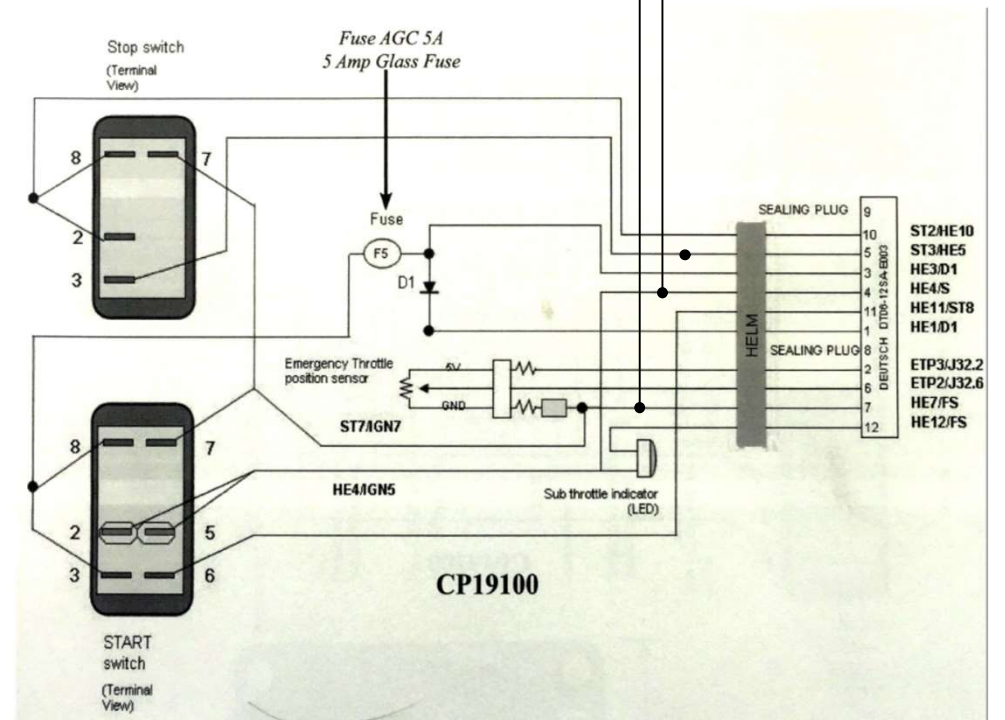

Date	Drawn by	Scale
2019-04-30	Pål Sørensen	-
Item name		
CoastKey connection to Yanmar CP19100		
Item number		Rev.
NWS003-09		B