


HEADING	
Title:	CoastKey Evinrude G1 Installation
Doc. Nr:	NWS021-28
Author:	Pål Sørensen
Issue date:	16-04-2020


HISTORY				
Issue number	Date	Version	Owner	Approved by
1	16-04-2020	A	Pål Sørensen	
2				
3				

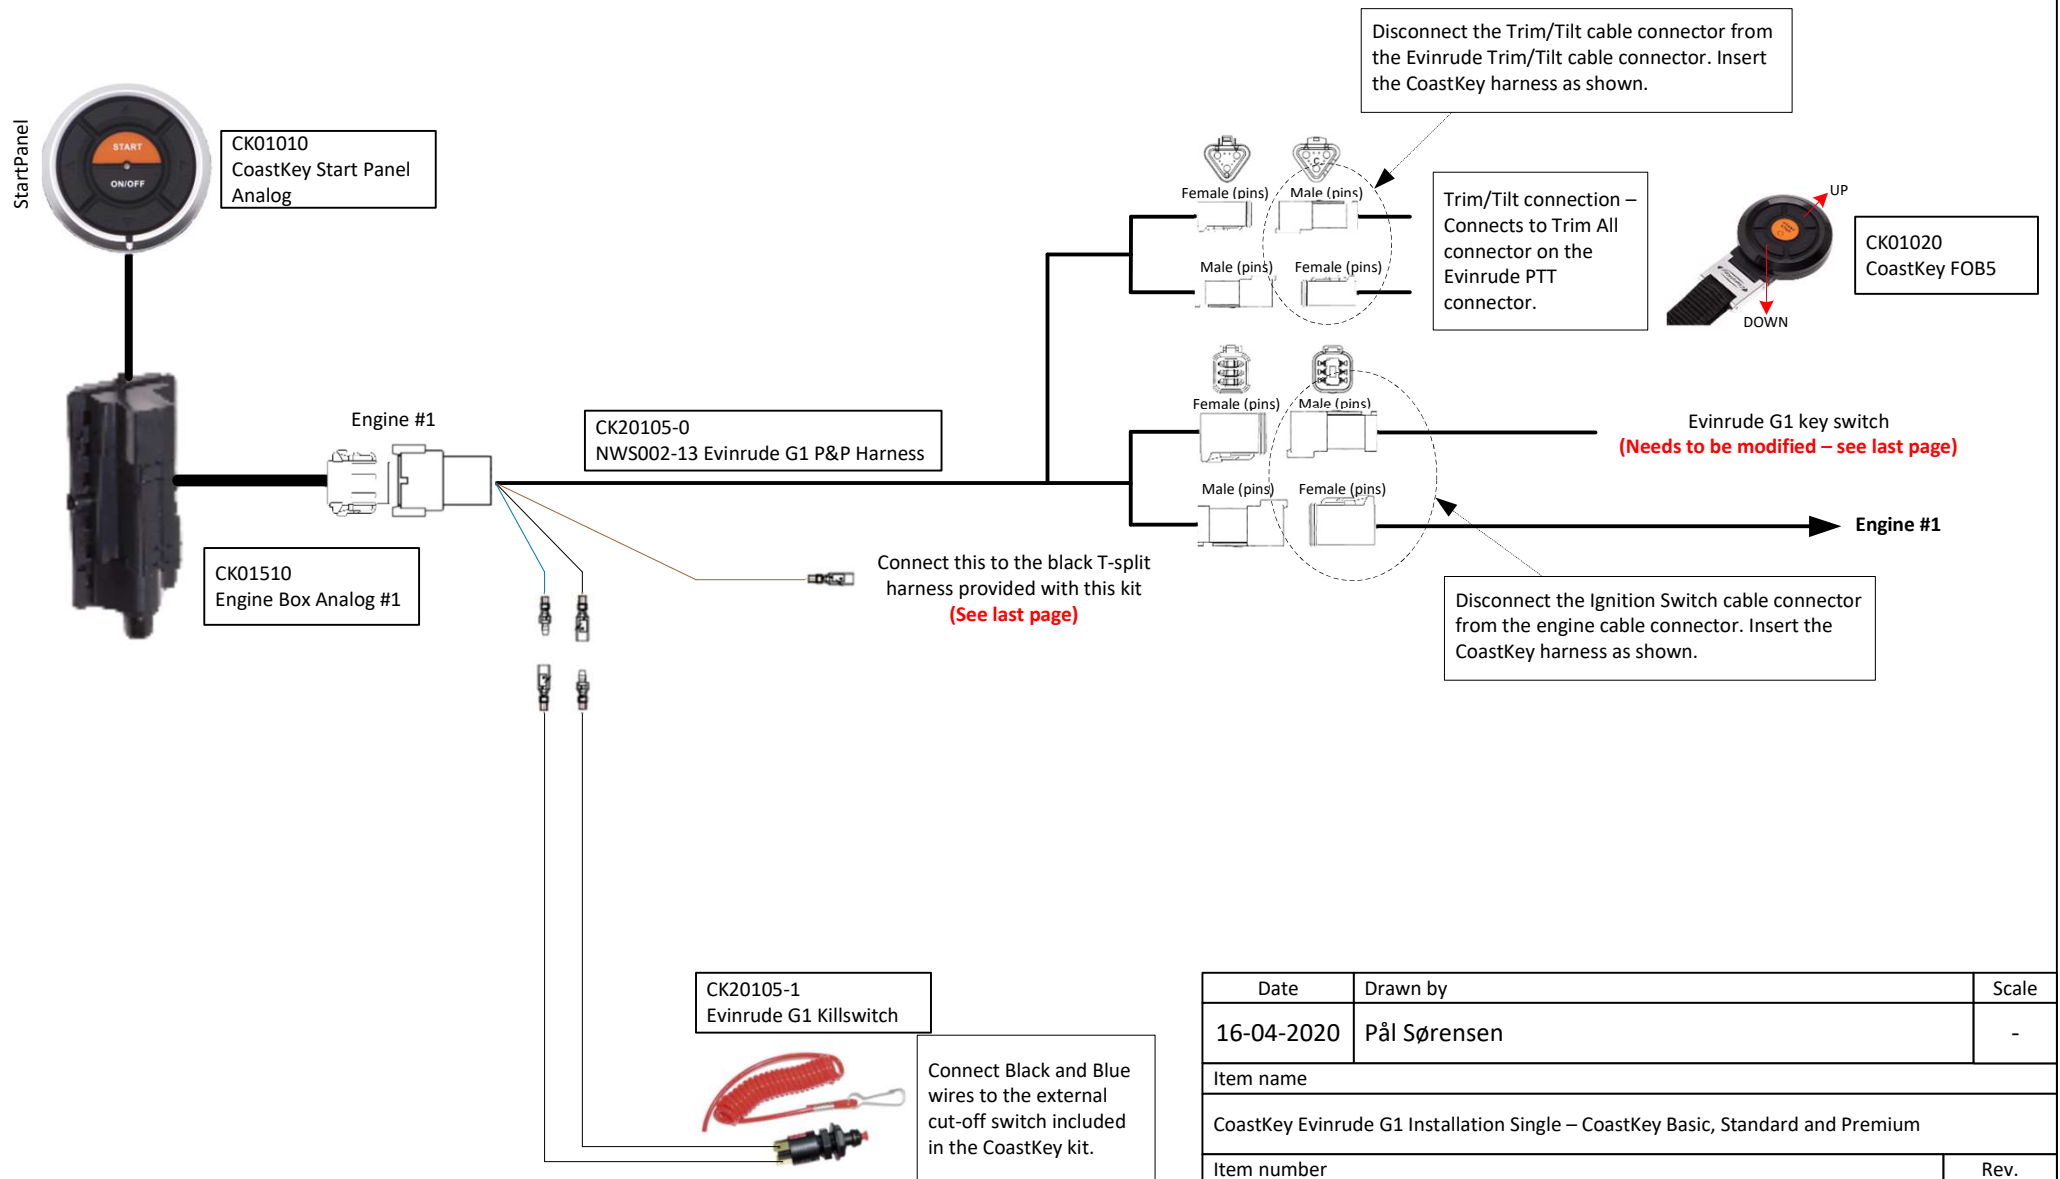



Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G1 Installation Single – CoastKey Basic, Standard and Premium		
Item number		Rev.
NWS021-28		A



Disconnect the Black wire with yellow stripe from the ignition switch – «M» terminal.

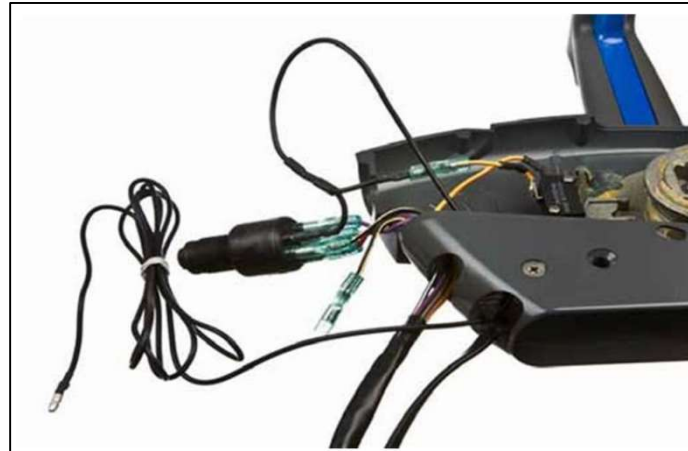

1. Disconnect the Yellow wire with Red stripe from the post on the rear side of the ignition switch («S» terminal).
2. Connect the female plug on the T-split harness provided with the kit to the same post.
3. The male connector on the T-split is then connected to the yellow wire with red stripe, that was removed from the ignition switch.

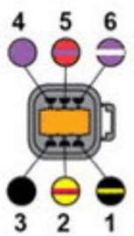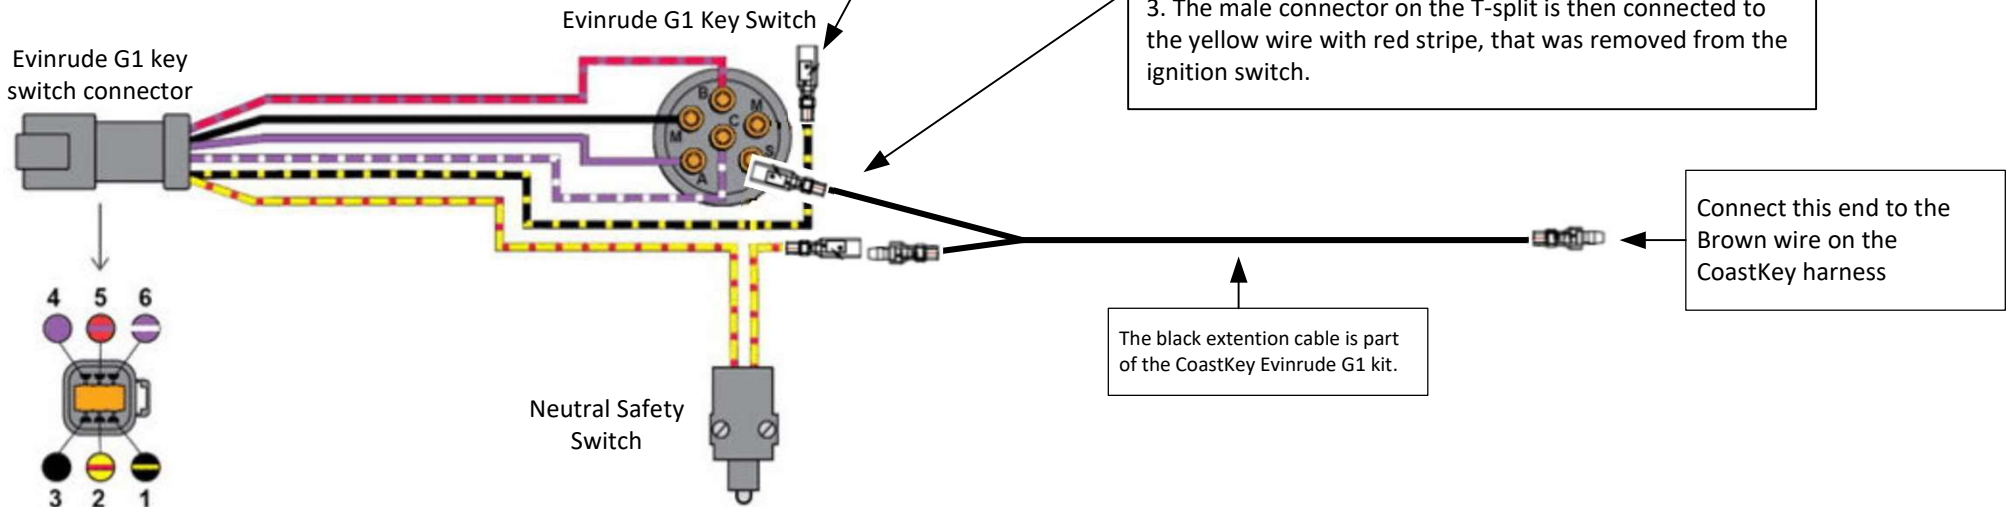

Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G1 Ignition Switch Modification – CoastKey Basic, Standard and Premium		
Item number		Rev.
NWS021-28		A